

# ECOFLOORS NZ


info@ecofloors.co.nz

## Toli NS Step 800 Custom Width System


**MOQ** : 1 Carton or Plus 1 sheet unit

**Lead time** : 3 weeks to manufacture

### Type A (integrated riser)

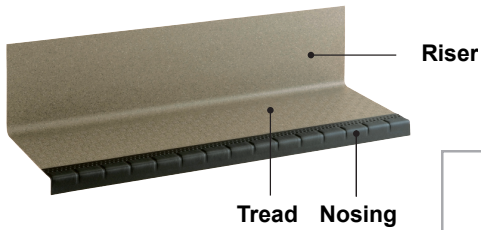

### Type B (tread type)

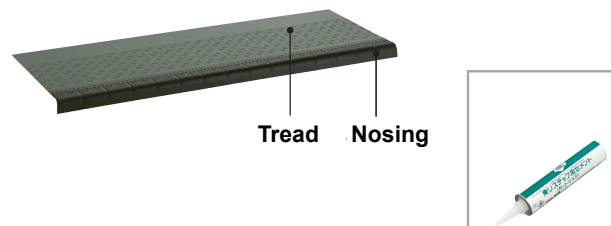

Width	POA	CTN QTY	No. of Nosing Filler	Width	POA	CTN QTY	No. of Nosing Filler
780 mm		7 pcs/case	1	780 mm		10 pcs/case	2
840 mm			1	840 mm			2
900 mm			1	900 mm			2
960 mm			2	960 mm			2
1020 mm			2	1020 mm			2
1080 mm			2	1080 mm			2
1140 mm			2	1140 mm			2
1200 mm			2	1200 mm			2
1260 mm			2	1260 mm			3
1320 mm			2	1320 mm			3
1380 mm			2	1380 mm			3
1440 mm			2	1440 mm			3
1500 mm			2	1500 mm			3
1560 mm			2	1560 mm			3
1620 mm			2	1620 mm			3
1680 mm			2	1680 mm			3
1740 mm			3	1740 mm			3
1800 mm		3	1800 mm		4		